


MM Strut Tower Brace, '94-95 GT, Cobra (MMSTB-3)

Read all instructions before beginning work. Following instructions in the proper sequence will ensure the best and easiest installation.

The MM Strut Tower Brace attaches to each strut tower and to the firewall.




1. Remove the factory strut tower brace if car is so equipped.
2. One screw securing the plastic firewall cover will interfere with the strut tower brace. It is located near the center of the car. Remove it.

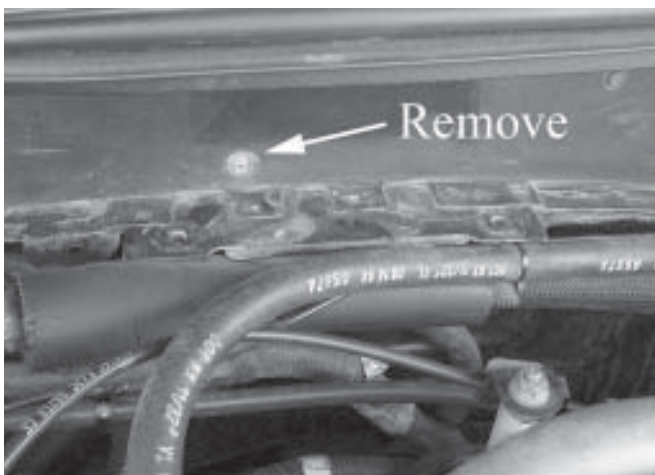


3. Set the MM Strut Tower brace into position. The brace will settle into position on the strut towers and the firewall when it is positioned evenly side to side.

4. Start the bolts at the strut towers. Use the Ford bolts or the supplied bolts with the 8mm small diameter flat washers. Do not tighten the bolts.

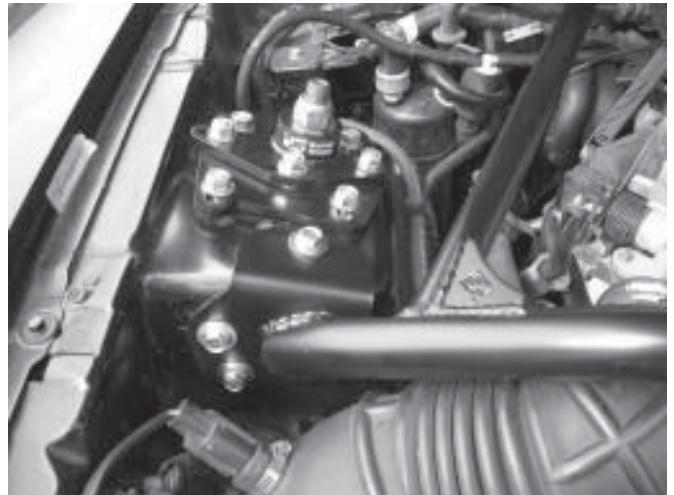

5. Start the bolts at the firewall mount with the 8mm large diameter washers.

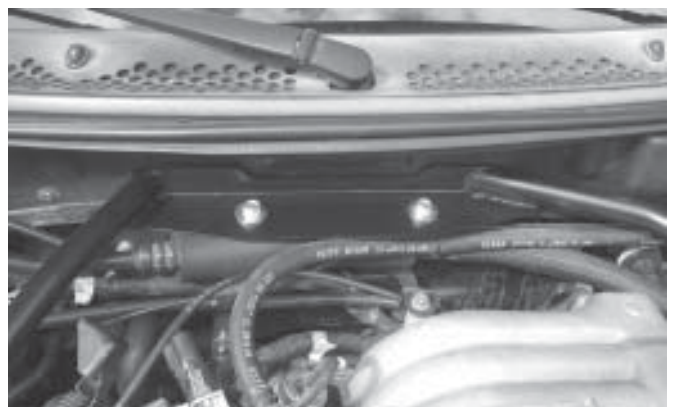

6. Torque the bolts at the strut towers to 19 ft-lb.
7. Torque the bolts at the firewall mount to 19 ft-lb.

Hardware List:

- 6 8mm Flat Washer (Small Diameter)
- 8 M8 x 20mm flange bolts
- 2 8mm Flat Washer (Large Diameter)