

---

## *MM Strut Tower Brace, 1996-97 Cobra (MMSTB-4.1)*

---

*MMSTB-4.1 is for 1996-97 Cobra's with a factory strut tower brace.*

*Read all instructions before beginning work. Following instructions in the proper sequence will ensure the best and easiest installation.*

The MM strut Tower Brace attaches to each strut tower and to the firewall.



1. Remove the windshield wiper arms: mark on the window where the wiper lays, lift the wiper up off the window, press towards the window on the small knob shown below, and lift straight up.



2. Raise the hood.
3. Set the MM Strut Tower Brace into position. The brace will settle into position on the strut towers and the firewall when it is positioned evenly side to side.



4. Bolt the Strut Tower Brace to the strut towers at the stock location. Use either the original Ford bolts, or the supplied 8mm bolts.

5. Mark the plastic covering the firewall.



7. Cut out the portion of the plastic you marked. *Tip:* use a hacksaw on the vertical cuts. Use a utility knife to score the plastic on the horizontal cut, then bend and break the plastic on the scored line.




6. Remove the alarm siren (if so equipped) from the firewall. Then remove the plastic cover from the firewall. It is held on with several small sheet metal screws, as well as the hood seal.

8. Put the plastic back into position on the firewall. Set the Strut Tower Brace back into position and check that the plastic is notched correctly.



9. Remove the plastic cover from the firewall.

10. Remove the 5/16" bolt securing the 'A' pillar applique. It is located above the door hinge. The door must be open to access the bolt. Do this on both the Driver and Passenger sides of the car.

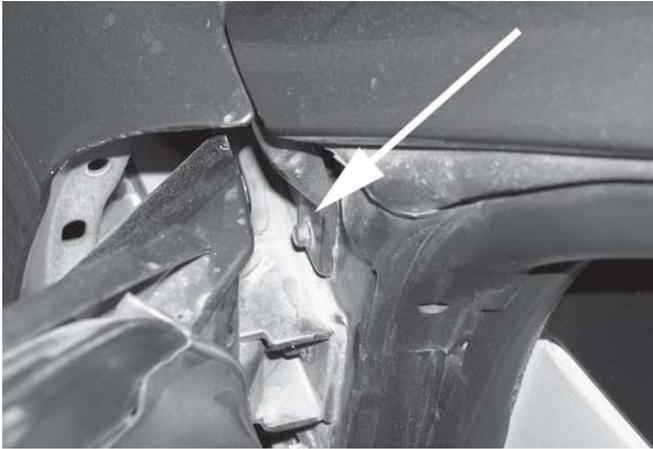

11. DO NOT remove the applique. Gently move it away just enough to open a small gap for removal of the plastic cowl at the base of the windshield.



12. Remove the plastic cowl cover at the base of the windshield. It is held on with clips. Remove it by gently prying it upwards. When it is loose, disconnect the hose to the windshield washer nozzles (pointed to below).



13. Place the Strut Tower back into position. Install the bolts to secure the brace to the strut towers.
14. Hold the brace down and rearwards. Mark the position of the 8 holes at the firewall.



15. Remove the 6 bolts at the strut towers. Remove the Strut Tower Brace.
16. Correctly position the drill motor, shown below, while drilling the holes for the passenger side firewall tube.




17. Drill the holes at the firewall. Start with a 1/8" pilot bit. Drill out to 5/16". deburr the holes. Note: Hold the hood vertical when drilling downwards into the pinchweld. That will provide clearance for the drill motor. *Tip:* Hold the hood upright by using a rope or strap to tie the hood to the steering wheel.



18. Install the 5/16"-18 x 3/4" long bolts in the nutplate. Thread them through so that they protrude on the flat side of the nutplate. It is not necessary to thread the bolts all the way in.



19. Line up the nutplate on the 5/16" holes drilled in the firewall in Step 19. Use the bolts installed in the previous step as guide pins. Make sure that the small hole in the plate is biased downward.

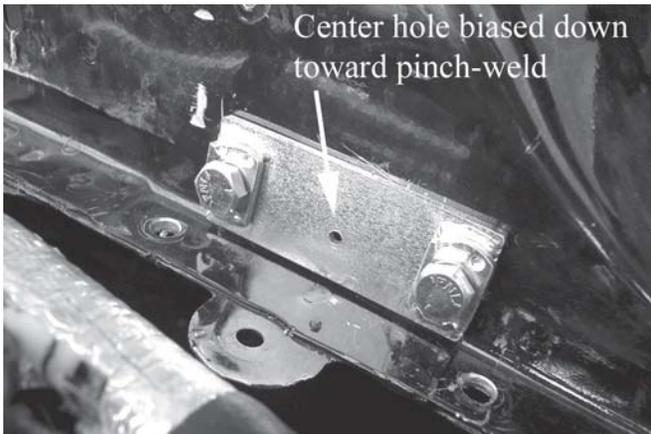


20. Using the nutplate as a template, mark the location of the small hole using a scribe or punch.
21. Remove the nutplate from the firewall.
22. Drill a 1/8" pilot hole on your mark.
23. Drill the hole out to 3/16".
24. Deburr the hole.
25. Remove the 5/16"-18 x 3/4" long bolts from the nutplates.

26. Install the nutplates behind the firewall. The flat side should be against the firewall, with the nuts toward the rear of the car. Make sure the small hole lines up with the 3/16" hole drilled in Step 21. Thread the 5/16"-18 x 3/4" long bolts into the nutplate to keep it from rotating when the sheetmetal screw is installed.



*Tip:* On the Driver's Side, tape the nutplate to a screwdriver to help hold it in position behind the firewall while installing the bolts.

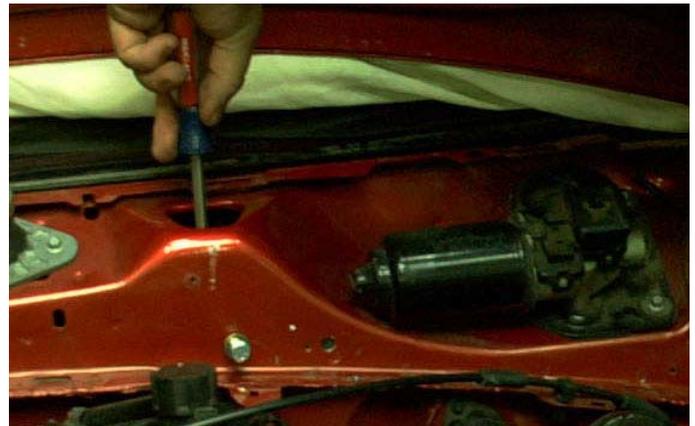

27. Install the #8 sheet metal screw into the small hole in the nutplate. Remove the 5/16"-18 bolts.



*NOTE:* This will secure the nutplate to the firewall, making future removal and reinstallation of the Strut Tower Brace significantly easier. The head of the sheet metal screw should line up with the hole at the back of the strut tower brace mounting pad.

28. Set the Strut Tower Brace back into position.
29. Insert all of the attachment bolts into position and start the nuts before tightening any bolt.
30. Tighten the bolts into the nutplates at the firewall.



31. Tighten the bolts at the pinchweld.
32. Tighten the bolts at the strut towers.



33. Reconnect the hose for the windshield washer nozzles. Reinstall the plastic cowl cover at the base of the windshield by gently snapping it back into position on its clips. Make sure the outer edge of the plastic cowl cover slips past the 'A' pillar applique and into its correct position. Reinstall the 'A' pillar applique bolts previously removed in Step 10.

34. Reinstall the firewall plastic cover. Put the passenger side into position first, making sure to place it into proper position underneath the ground strap. Secure with the retaining screws.
35. Reinstall the rubber weatherstripping.
36. Reinstall the alarm siren, if so equipped.
37. Reinstall the windshield wiper, following the reverse of step 1.



*NOTE:* Access to the fuse box -- the cover can still be opened by pulling the cover forward and past the strut brace main tube as you lift the cover.



*NOTE:* If the fuse box cover cannot be opened, reposition the fuse box by moving it forward. This can easily be done by slipping a screwdriver between the front of the strut tower and the rear of the metal fuse box mounting tabs (these are attached to the strut tower). Gently pry the tabs forward. This will move the fuse box slightly forward.



#### Hardware Kit

- |    |                       |
|----|-----------------------|
| 4  | 5/16" x 1" Hex Bolt   |
| 4  | 5/16" x 3/4" Hex Bolt |
| 6  | 8mm x 20mm Bolt       |
| 12 | 5/16" G8 Washer       |
| 6  | 8mm Flat Washer       |
| 4  | 5/16" Nylock Nut      |
| 2  | Sheetmetal Screw      |
| 2  | Nut Plate             |